



Stompa®

WWW.STOMPA.COM



Art.nr. A023

(N) Garderobeskap


(GB) Wardrobe

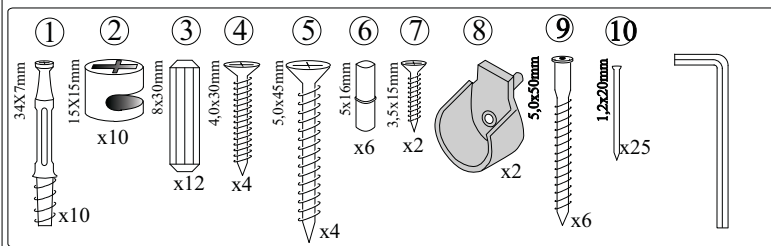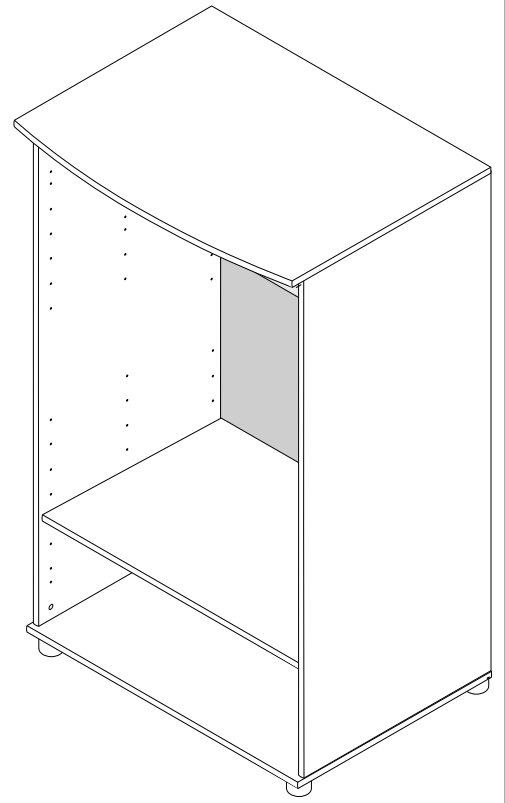


Du trenger også et stjerne-skrudern og en hammer.
You also need a crosshead screwdriver and a hammer.
Zusätzlich brauchen Sie einen Kreuzschraubenzieher und einen Hammer.

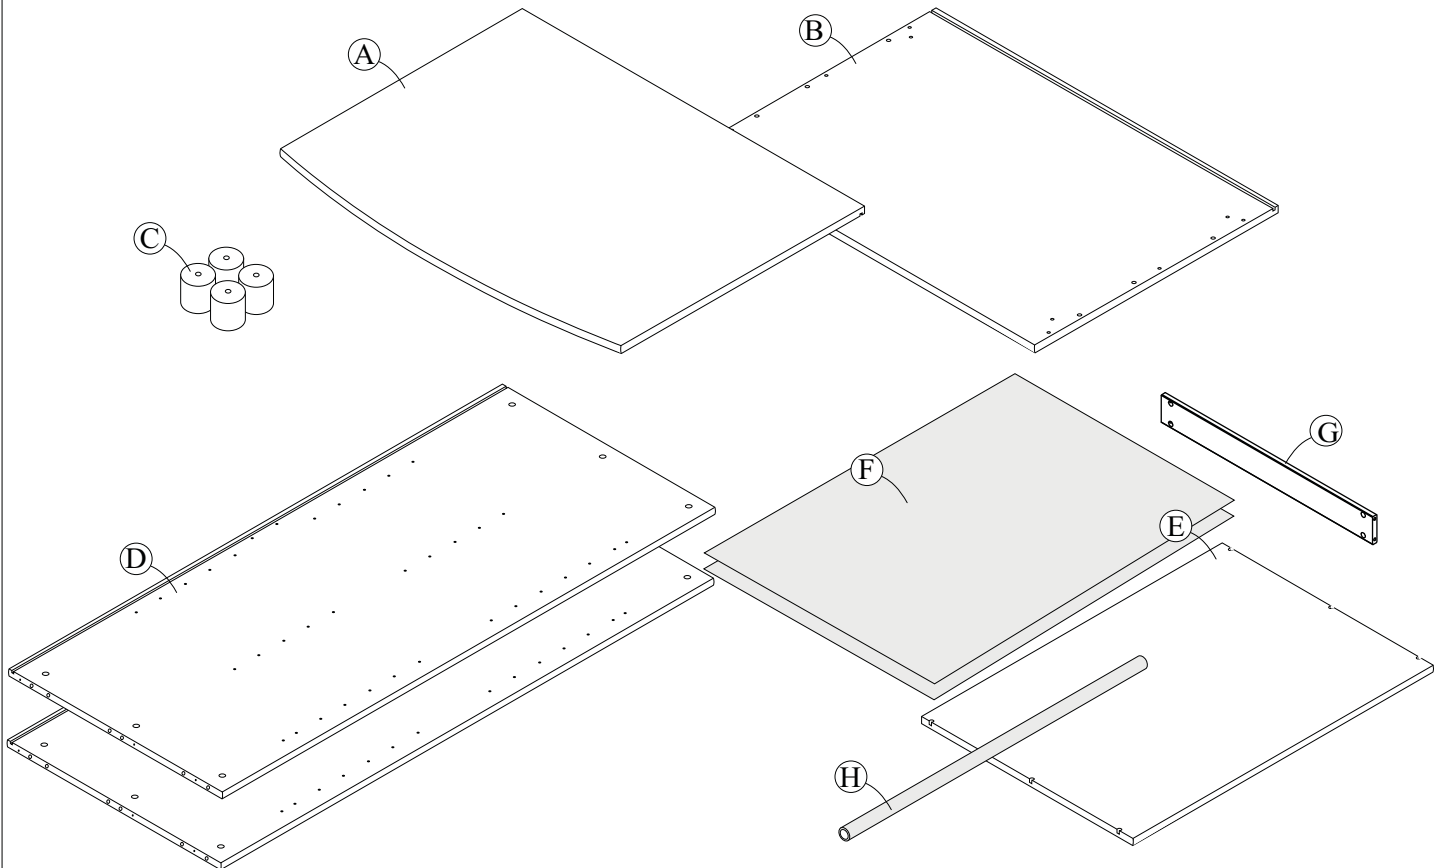


1

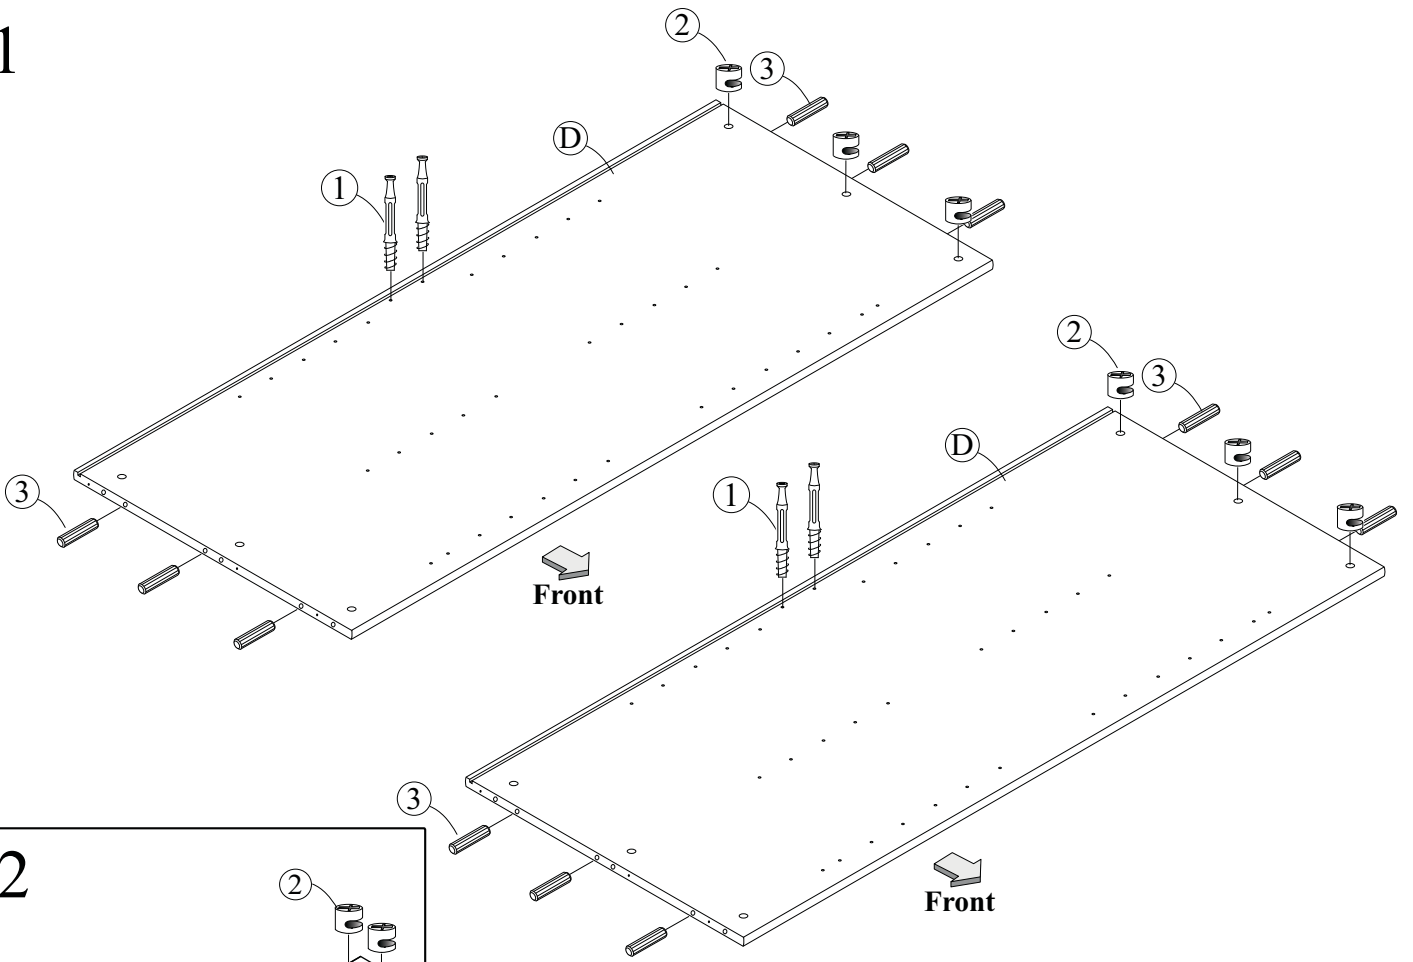



2

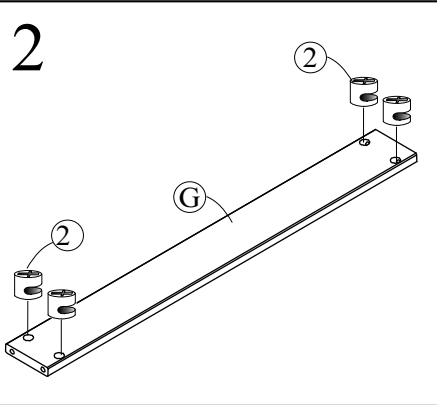

3



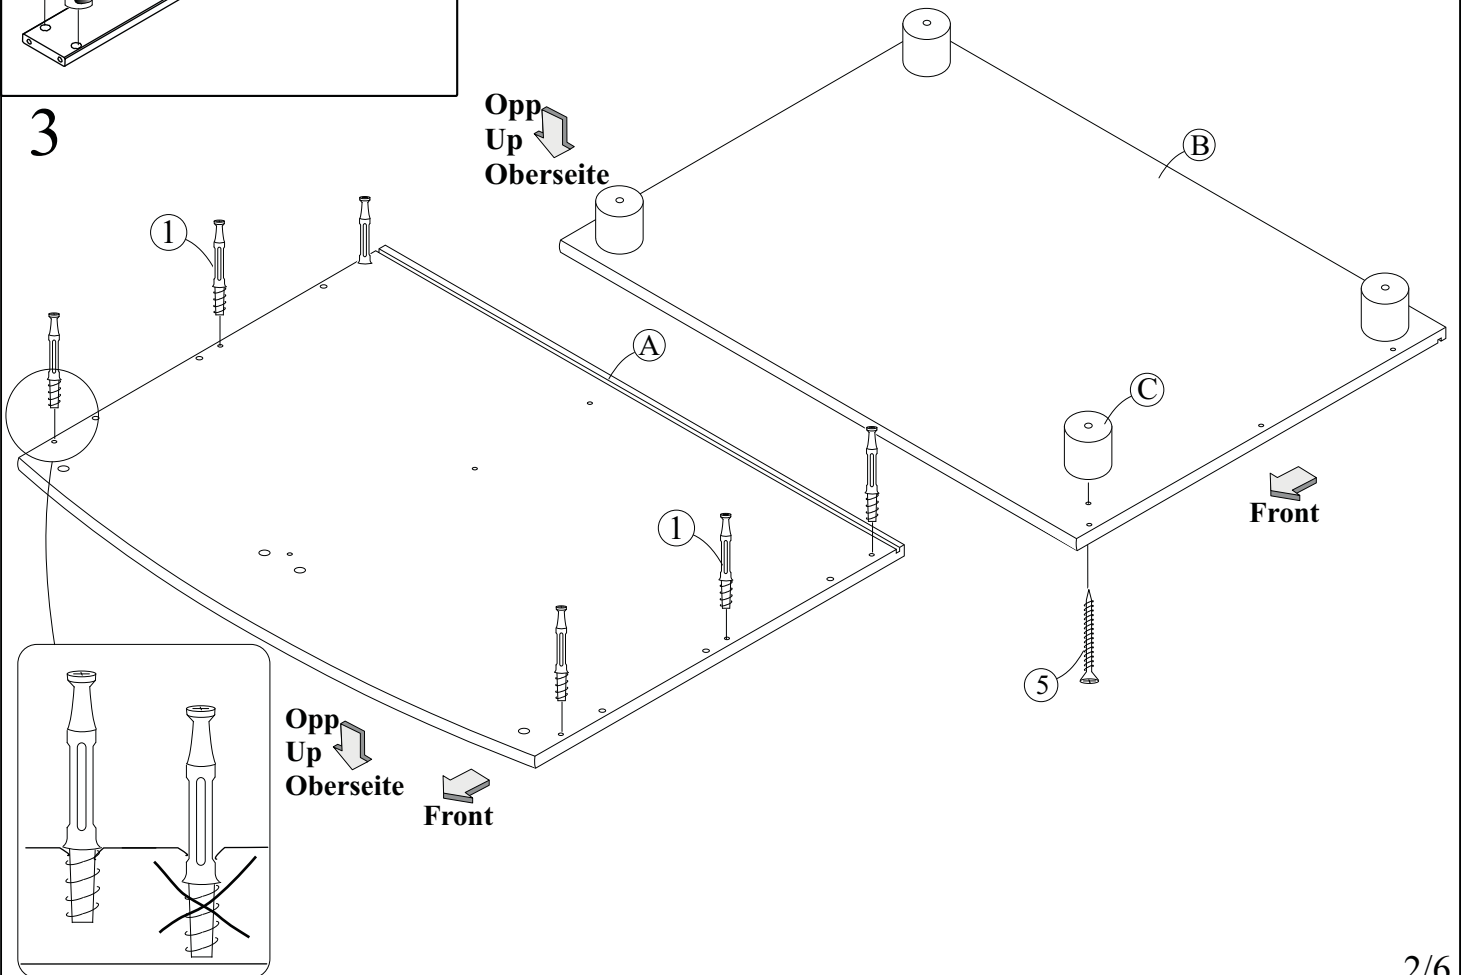


4

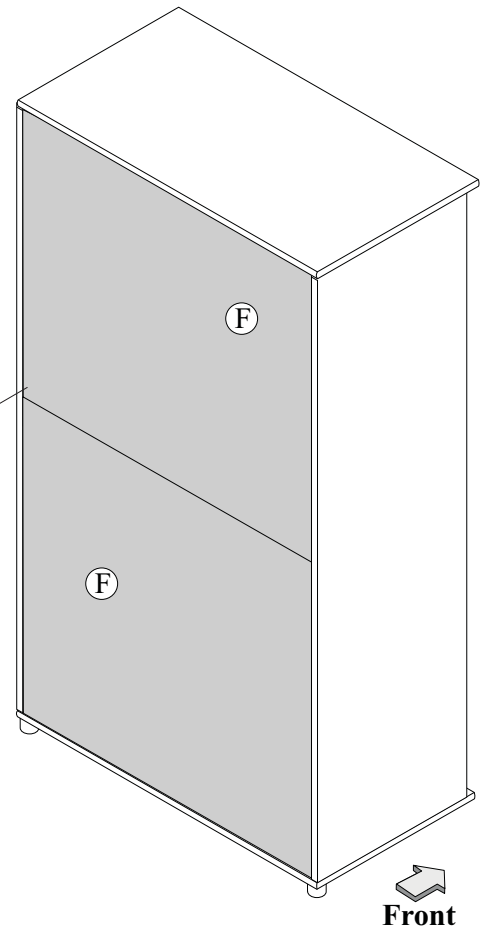
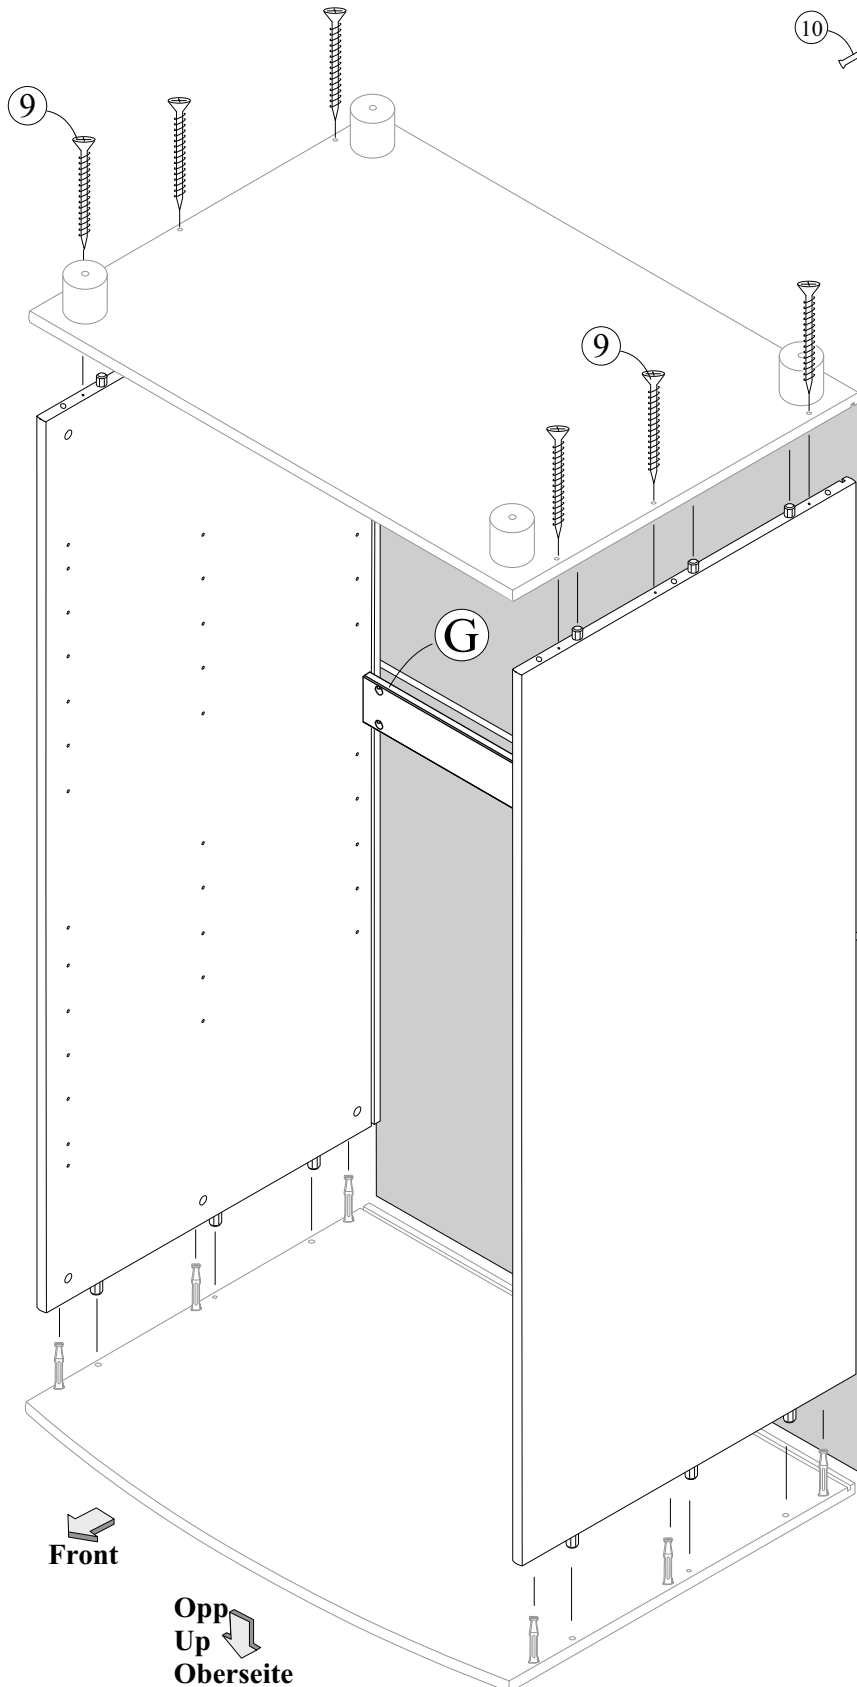


Husk å trekke til alle
eksenternutterene !
Remember to tighten
all the eccentric houses!
Nicht zu vergessen, alle
Gehäuse müssen fest-
gezogen werden !



5

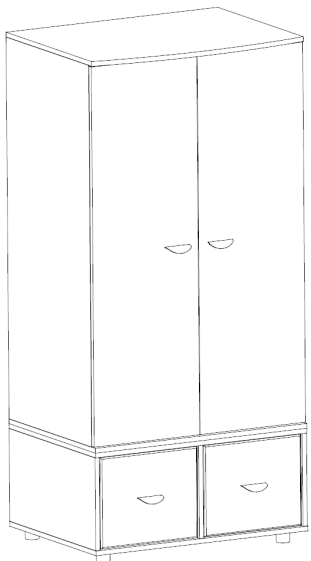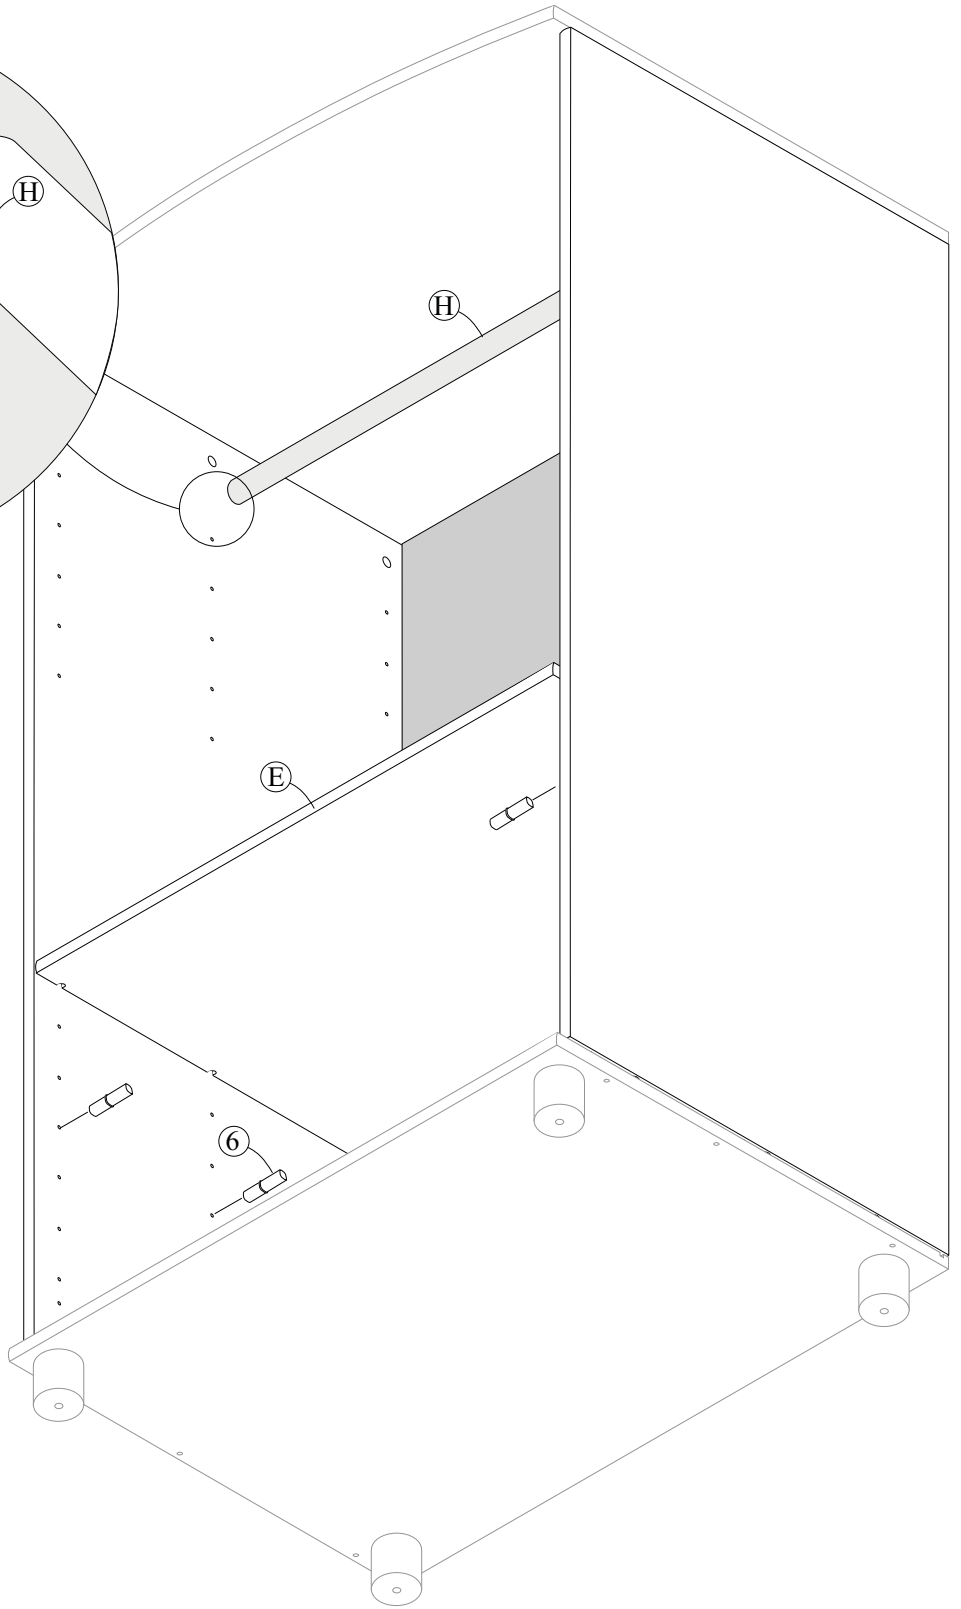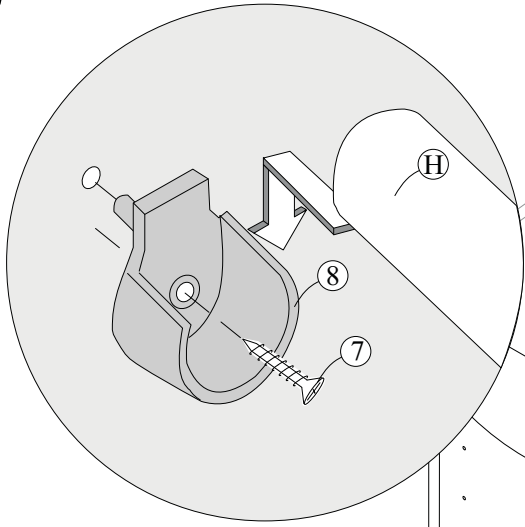


To Buid up wardrobe with extra (A063) unit, use screws No 4 to fix Wardrobe with this!

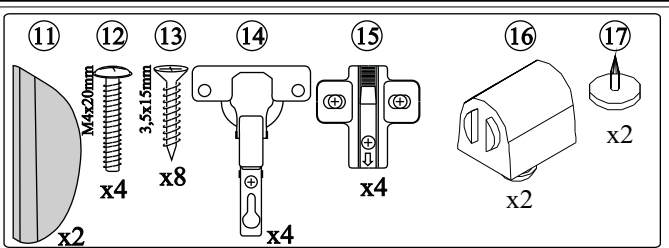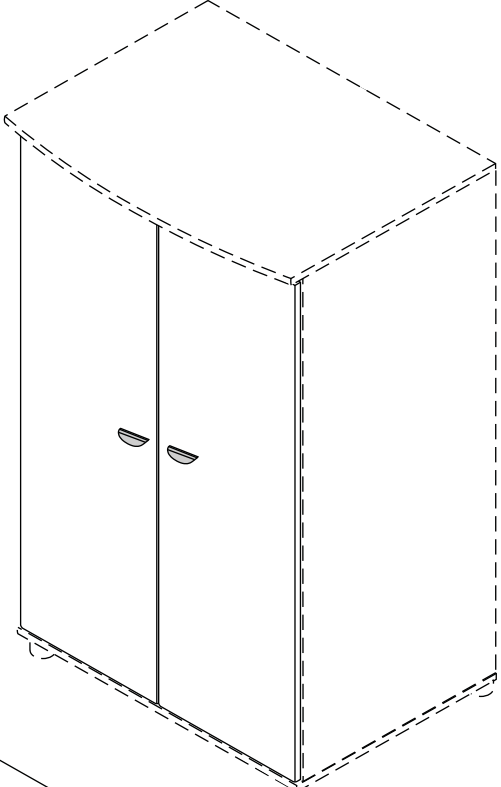

Du trenger også et stjerne-skrudern og en hammer.
 You also need a crosshead screwdriver and a hammer.

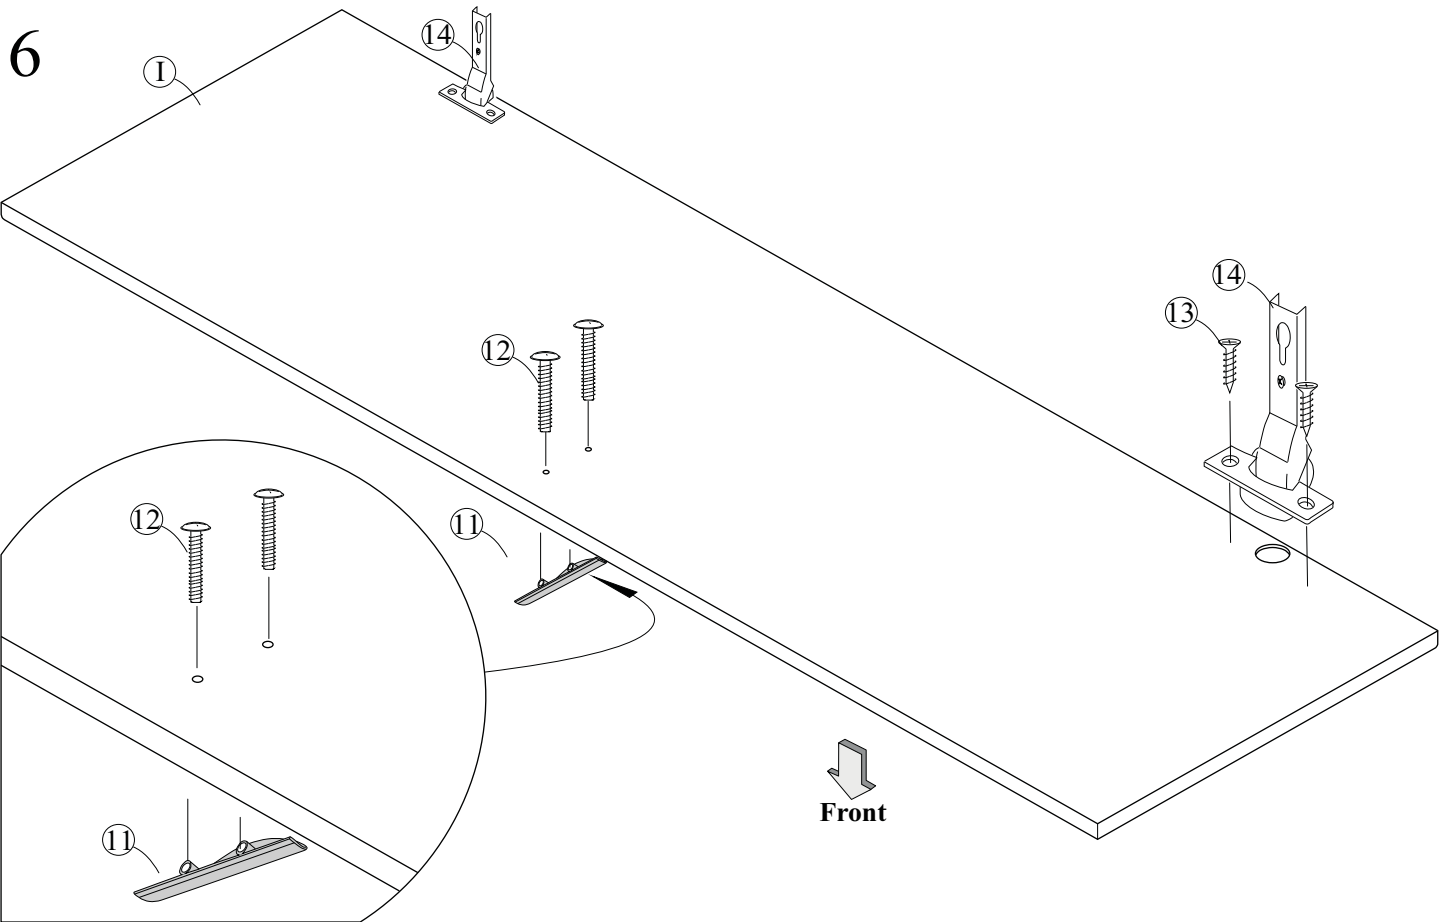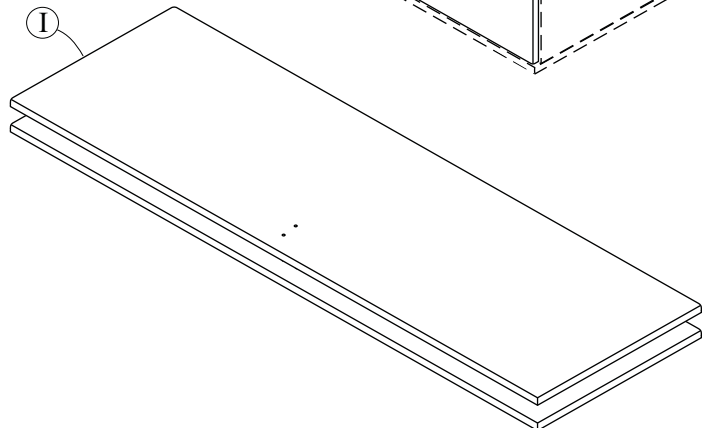

7

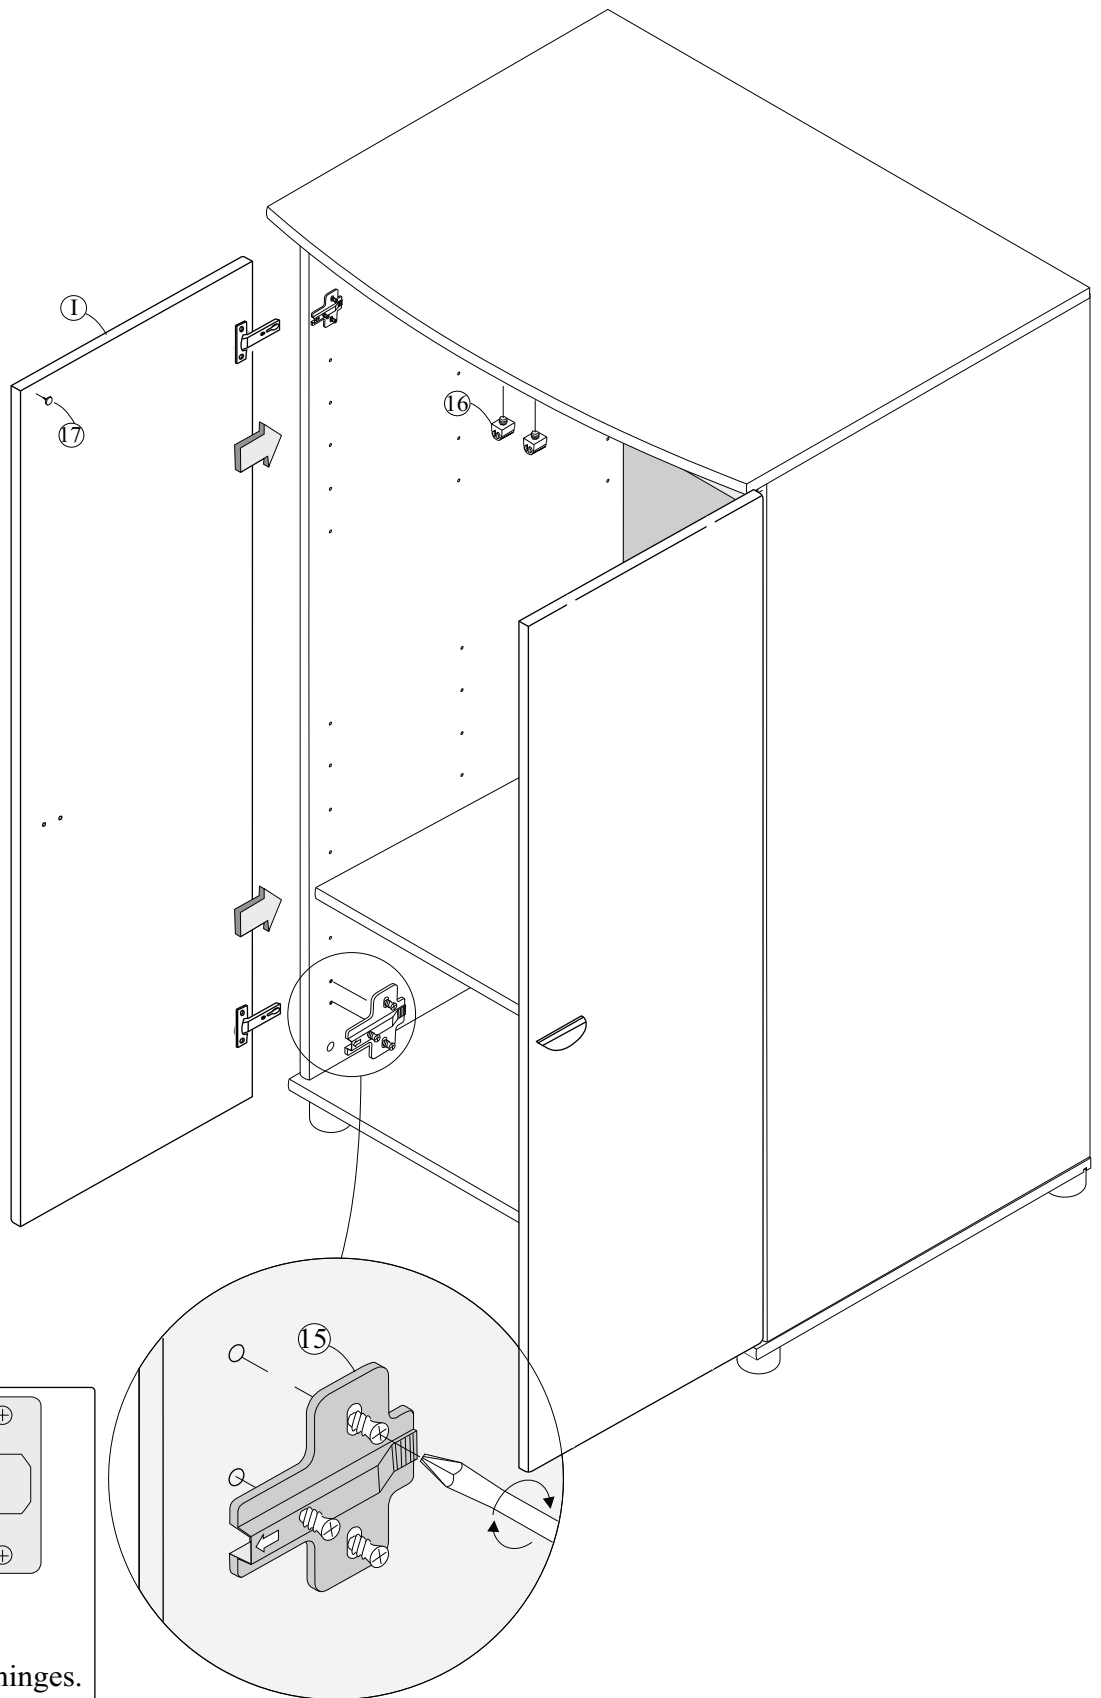

Justeringskruer.
Screws for adjusting the hinges.

United Kingdom:

If anything should fail to give satisfaction, please contact your STOMPA stockist with details of any problems with the product. Please quote Art number & serial number on any correspondence.

Stompa UK
The Old Mill House
Dockfield Road, Shipley
West Yorkshire, BD17 7AE
E-mail: stompa@stompa.com
www.stompa.com